



INSTALLATION GUIDE

SIMBOOTH KIT 2 - 4K

SimBooth Safety Notice	3
IDRA II Safety Notice	4
PC Specifications	5
Parts List	6-7
Structure assembly	8-11
Floor assembly	12-13
IDRA II installation	14
Projector installation	14-15
Cables connection	16-17
GolfIn Launcher & IDRA II calibration	18
Appendix A (projector placement)	19
Appendix B (AH30ST adjustments with a monitor)	20-23
Appendix C (AH30ST adjustments without a monitor) ...	24-27



**WARNING**

PLEASE READ THE FOLLOWING BEFORE USE.

FAILURE TO FOLLOW THE INSTRUCTIONS COULD RESULT IN SERIOUS INJURY, PROPERTY DAMAGE, AND/OR VOID THE DEVICE WARRANTY.

- NEVER lift, move, or raise the structure if the impact screen is not installed and secured. The impact screen plays a critical structural stabilization role. Lifting or handling the structure without the screen installed may cause the frame to become unstable, tip, or collapse. This may result in serious injury, death, or severe property damage.
- SimBooth structures are designed exclusively for indoor golf simulation. Do not use the structure for storage, climbing, or for hanging objects.
- Install only on a flat and stable floor capable of supporting the total weight of the structure. Assembly must be performed by a minimum of four (4) people.
- Ensure all bolts, screws, and panels are correctly tightened before use. Loose or missing components may cause instability or structural collapse.
- Do not remove or modify the impact screen during normal operation. The screen is essential to absorb golf ball impacts and help prevent injuries.
- Keep children and pets away from the hitting area. Always remain aware of your surroundings and use caution while swinging.
- Do not modify the structure or add any additional weight to the frame or ceiling area.
- Indoor use only. Do not expose the structure to outdoor conditions, excessive humidity, water infiltration, or direct sunlight. Recommended operating conditions: Temperature: 10°C to 35°C (50°F to 95°F) Humidity: 30% to 65%
- Verify that the ceiling height and room dimensions meet the requirements of your specific SimBooth model before installation.
- Inspect the structure regularly to detect: Loose hardware, Worn impact screen, Damaged panels, etc. Replace worn or damaged components as needed.
- Always follow official SimBooth installation instructions. Improper assembly may compromise safety and void the warranty.

**WARNING**

PLEASE READ THE FOLLOWING BEFORE USE.

FAILURE TO FOLLOW THE INSTRUCTIONS COULD RESULT IN SERIOUS INJURY, PROPERTY DAMAGE, AND/OR VOID THE DEVICE WARRANTY.

- Before installing IDRA II, ensure the ceiling structure is capable of supporting a minimum of 20 lbs (9 kg). If the installation area is not sufficiently strong, it must be reinforced before installation. Failure to install on a secure structure may cause the launch monitor to fall, resulting in serious injury or equipment damage.
- The IDRA II mounting plate is specifically designed to secure an IDRA II launch monitor to the ceiling. **DO NOT** attach additional equipment or objects to the supplied bracket. Additional weight may cause damage or structural failure.
- Install IDRA II on a flat and stable surface only. Failure to do so may result in the launch monitor falling and causing injury.
- Do not attempt to disassemble, repair, or modify IDRA II. This may result in fire, electric shock, injury, or equipment damage. Contact support if issues occur.
- Ensure the hitting area is not directly exposed to sunlight, as this may negatively affect tracking performance.
- Always remain aware of your surroundings and play with caution.
- Do not install or operate IDRA II outdoors. This device is designed exclusively for indoor use.
- Do not install IDRA II where operating temperatures may be exceeded. Recommended operating temperature: 16°C to 30°C (61°F – 86°F) Excessive heat may damage the launch monitor.
- Install IDRA II away from excessive dust or humidity to prevent lens contamination and optical issues. Recommended humidity range: 30% to 65%
- Avoid touching the LED light to prevent burns. do not look directly into the LED light to avoid possible eye damage.

PC SPECIFICATIONS WITH GSPRO

Requirement	Minimum	Recommended
Processor	Intel Core i7, 10th Gen, with at least 16 logical processors	Intel Core i7, 10th Gen or newer, with at least 24 logical processors
Storage	512 GB	1 TB
GPU	Nvidia GeForce RTX 20 series	Nvidia GeForce RTX 40 series or newer
RAM memory	16 GB	32 GB
USB Ports	2 USB 3.0 & 1 USB-C ports are required	
Internet	High-speed Internet is required	

PC SPECIFICATIONS WITH E6 CONNECT

Requirement	Minimum	Recommended
Processor	Intel Core i7, 10th Gen or newer, with at least 16 logical processors	
Storage	512 GB	
GPU	Nvidia GeForce RTX 20 series	Nvidia GeForce RTX 30 series or newer
RAM memory	16 GB	
USB Ports	2 USB 3.0 & 1 USB-C ports are required	
Internet	High-speed Internet is required	



WARNING

AMD PROCESSORS & GPUS ARE NOT SUPPORTED.

DO NOT USE USB CABLE EXTENSION BETWEEN YOUR PC AND YOUR IDRA II.

WALL PANELS


RIGHT WALLS



LEFT WALLS



FLOOR PANELS

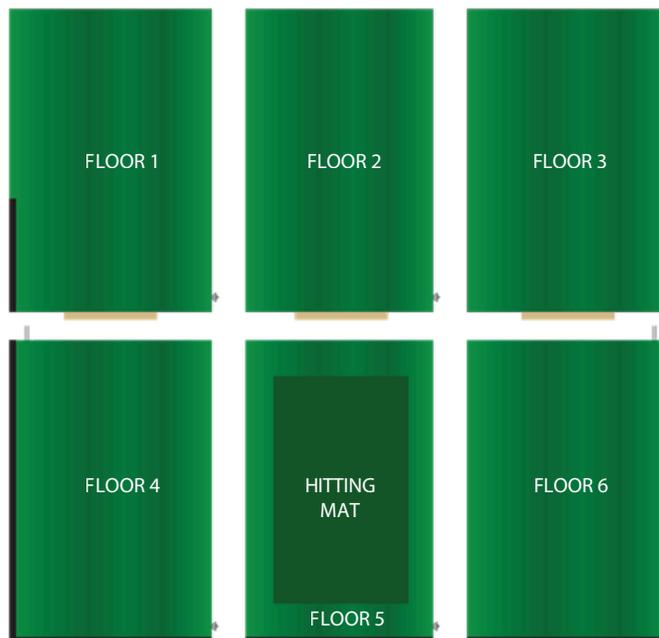

CEILING PANELS



ACCESSOIRES

Bolt-01 (4x)



Wing nut (5x)



Washer (32x)



Nut (28x)



Bolt-02 (4x)



Bolt-03 (8x)



Tees (10x)



Scissor bar (2x)



Hitting mat




White projection screen



Black impact screen



Shim 1/2"

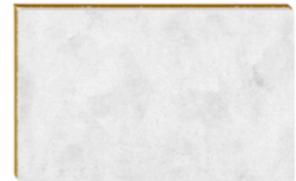

Projector beam



Shim 1/8"



Half walls (2x)



Remote & projector



Wire cover



LAUNCH MONITOR

IDRA II AI launch monitor



With power cable and two
USB camera cables (1x)

Calibration board (1x)



Nut + Washer
(2x)



USB Hub (1x)



Wireless remotely
operated switch (1x)
(Only included in North America)



For illustration purposes only. Model may vary.

BEFORE STARTING


You will need 4 people, 2 ladders, a screwdriver and 1/2 wrench.



1

Attach the left top wall to the left ceiling with washers & nuts.

2x Washers
2x Nuts

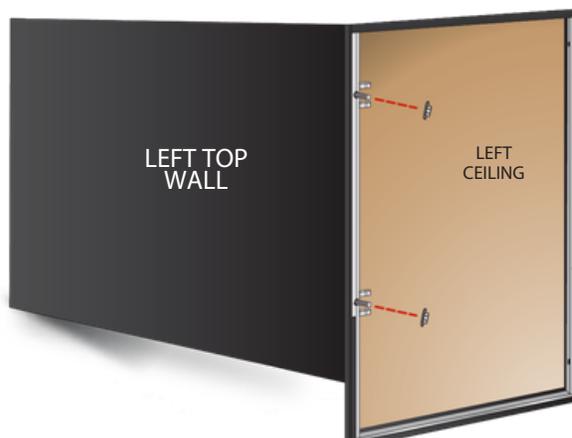

2

Using bolts-03, washers, and nuts, attach the middle ceiling to the left ceiling, then attach the right ceiling to the middle ceiling.

4x Washers
4x Nuts
4x Bolts-03



3

Using washers and nuts, attach the right ceiling to the right top wall.



2x Washers
2x Nuts

4

Remove the bottom wall covers, then attach the bottom wall panels to the top wall panels with washers & nuts







4x Washers
4x Nuts

5

(1) Unfold the scissor bars and (2) secure them with the safety pins. (3) Attach the scissor bars to both ends of the structure using wing nuts and Bolt-02. (4) Attach the scissor bars to the center of the structure using washers and Bolts-01.

4x Washers
4x Wing Nuts
4x Bolts-01
4x Bolts-02

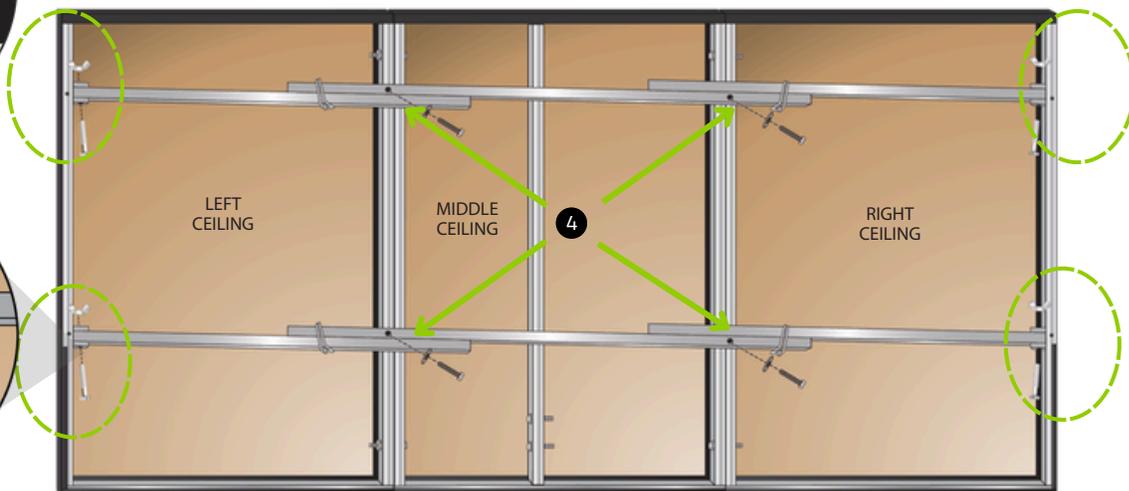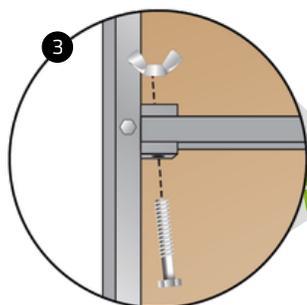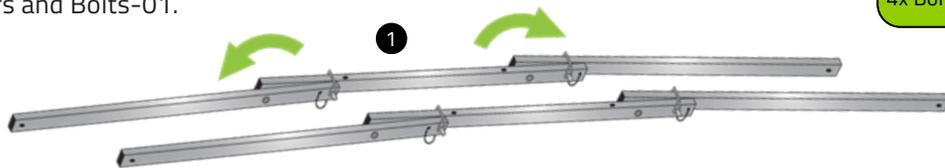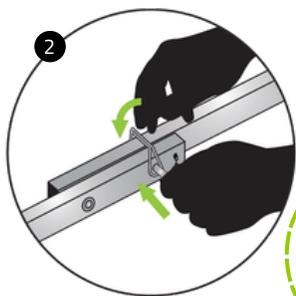

IT IS IMPORTANT TO COMPLETE THIS STEP BEFORE LIFTING THE STRUCTURE.


6

Attach the white projection screen to the structure using the velcros.



7

Attach the black impact screen over the white projection screen using the velcros. Make sure it is attached to the top velcros on the ceiling panels and that the bottom doesn't rest on the floor.

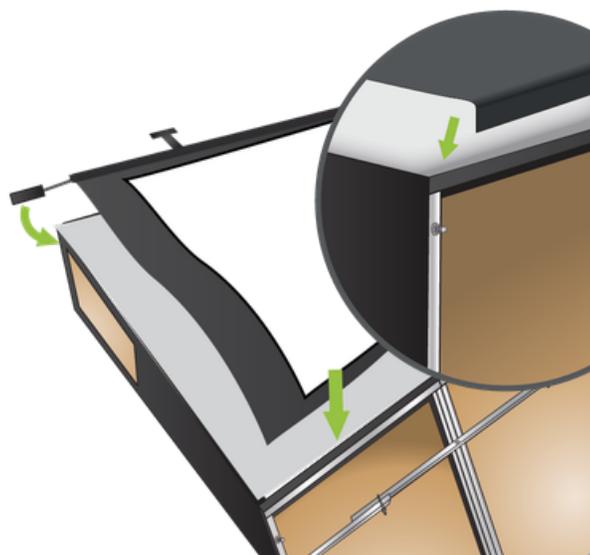

8

Lift the structure with four people.

**WARNING**

Never lift or raise the structure if the white projection screen is not installed. The structure may tip or fall and cause serious injury.

END OF STRUCTURE INSTALLATION SECTION

1

Assemble the floor sections in order (1 to 7). For A and B, you will need bolts-03, washers, and nuts. For C, you will need washers and nuts. You can use the shim to adjust the height of the hitting mat.

6x Washers
6x Nuts
4x Bolts-03



2

Step 1


Lift green carpet.

Step 2

Stretch the white screen behind and under the aluminum bar and reach for it through the space.

Step 3

Fix the screen on the first half of the velcro on the aluminum bar.

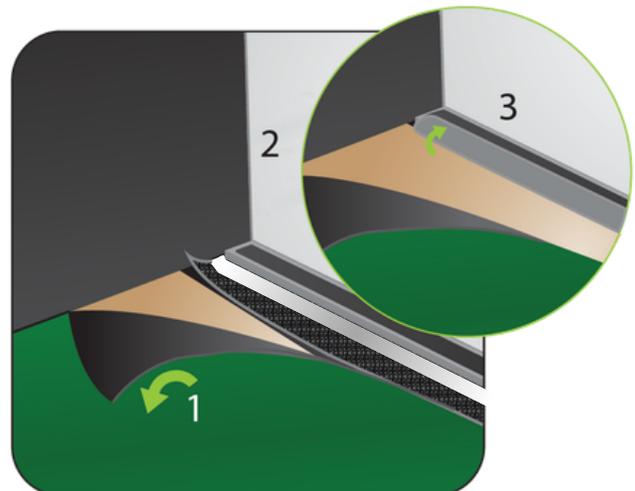

3

Step 1


Lift green carpet.

Step 2

Stretch the black impact screen behind and under the aluminum bar and reach for it through the space.

Step 3

Attach the T on the remaining half.

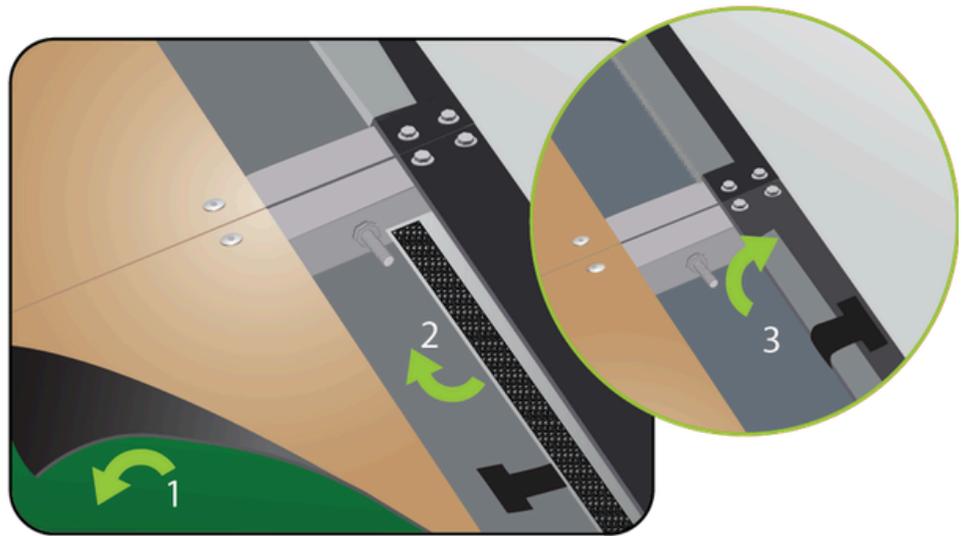

END OF STRUCTURE FLOOR INSTALLATION SECTION

HALF WALLS INSTALLATION

4x Washers
4x Nuts

Simply cut through the black carpet to access the pre-drill holes and insert the half-walls. Fix the half-walls to the structure with washers and nuts. Then, fix the removable panel on the bottom walls with the velcro.




1

IDRA II INSTALLATION

Climb on a ladder and fix the IDRA II camera through the holes that are located at the center the structure. Then, secure it tightly with two nuts on the other side.

2x Washers
2x Nuts

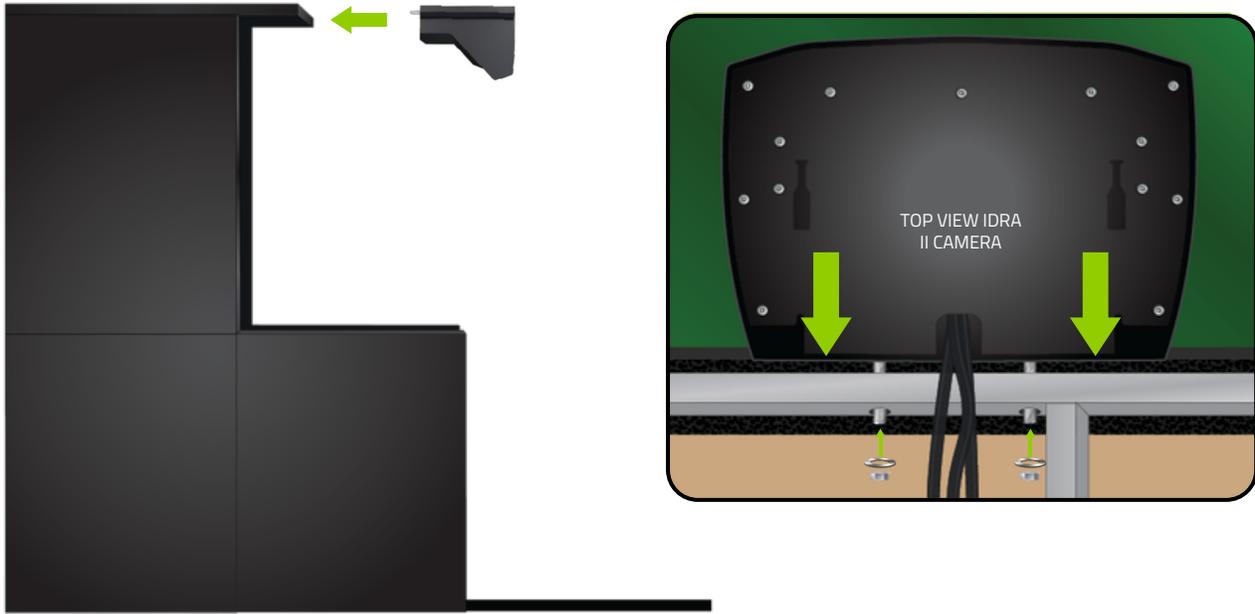


2

PROJECTOR BEAM INSTALLATION

Fix the projector beam to the ceiling structure with washers and nuts.

2x Washers
2x Nuts

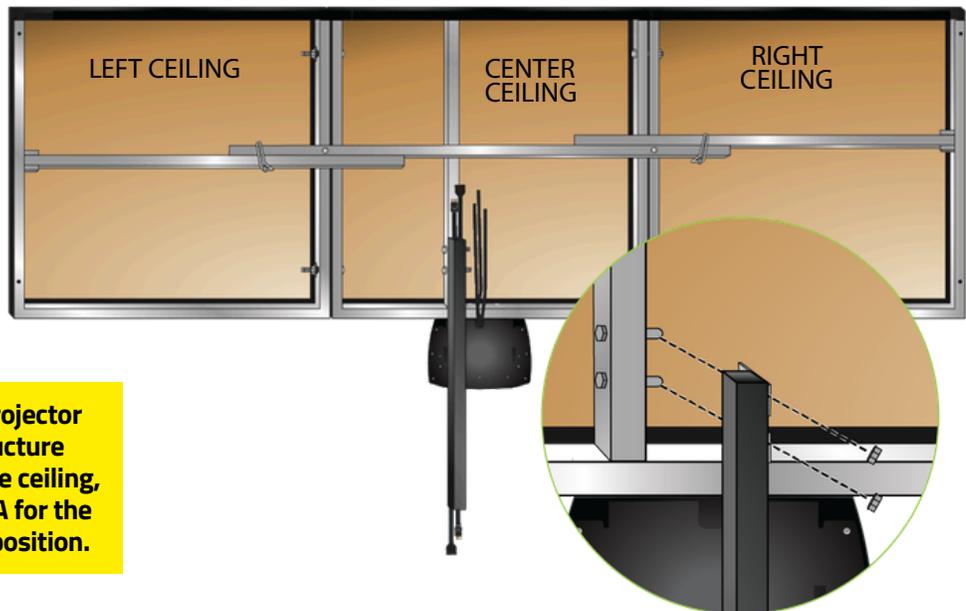


If you are not using the projector beam attached to the structure and plan to install it on the ceiling, please refer to Appendix A for the recommended projector position.

3

PROJECTOR ENCLOSURE INSTALLATION (OPTIONAL)

(A) To install the projector enclosure, first remove the rear adjuster feet of the projector completely, and slightly loosen the front adjustable foot without removing it. **(B)** Next, insert the projector into the enclosure, making sure the lens is properly aligned with the designated opening. **(C)** Finally, reinstall the removed adjustable feet through the holes of the enclosure to secure the projector in place, and re-tighten the front adjustable foot.

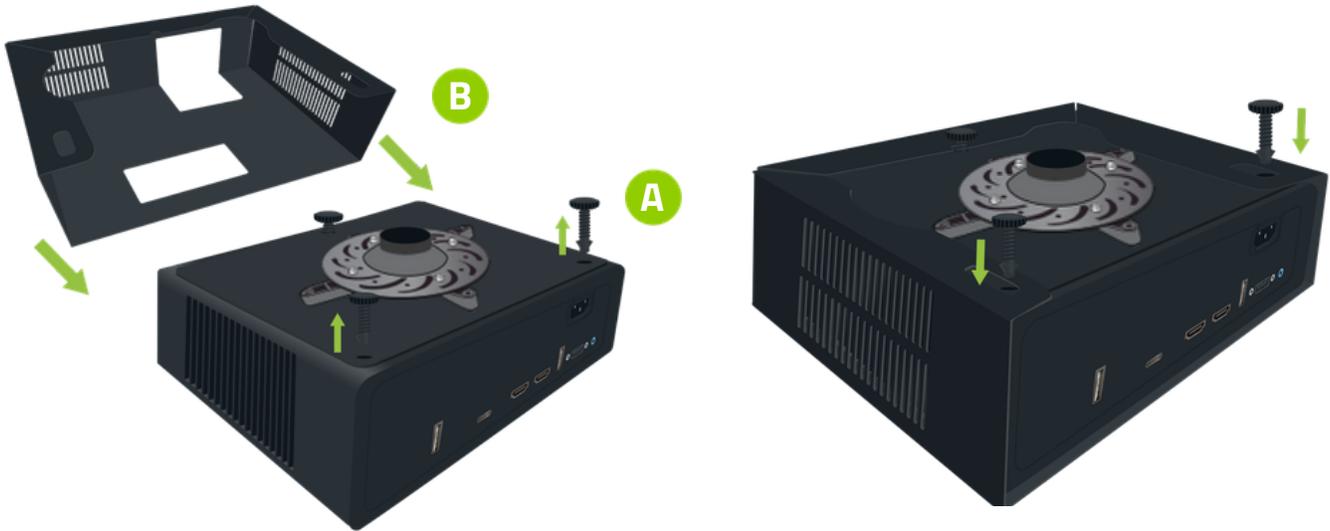

4

PROJECTOR INSTALLATION

Attach the projector on the projector mount. Refer to the instruction sheet inside the projector box.



5

IDRA CABLE CONNECTIONS

Connect the power cable (country-specific) to the wireless remote switch. Then, plug the wireless remote switch into your electrical outlet. Connect one of the two USB camera cables to the USB 3.0 SS port on your PC and the other to the hub. Plug the hub into the USB-C port on your PC. Make sure the USB cables are not under tension.



6



PROJECTOR CABLE CONNECTIONS

Plug the HDMI cable to the HDMI port on your projector and on your PC. Connect the power cable to the ground terminal and your electrical outlet. **Refer to Appendix B, C, D or E for your projector adjustments.**



WIRE COVER

Stick one side of the wire cover to the structure using the Velcro. Gather your wires inside the wire cover and, forming a loop over the wires, stick the second side of the wire cover just in front of your first Velcro.

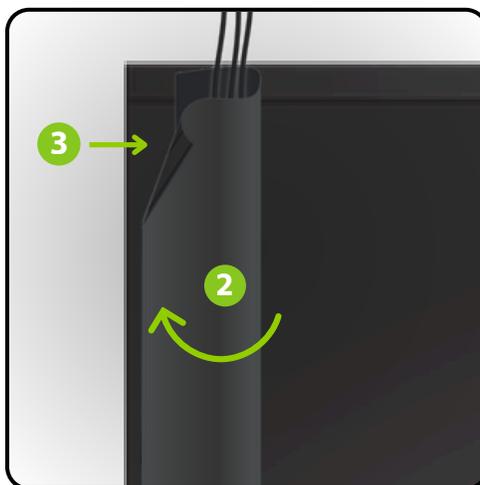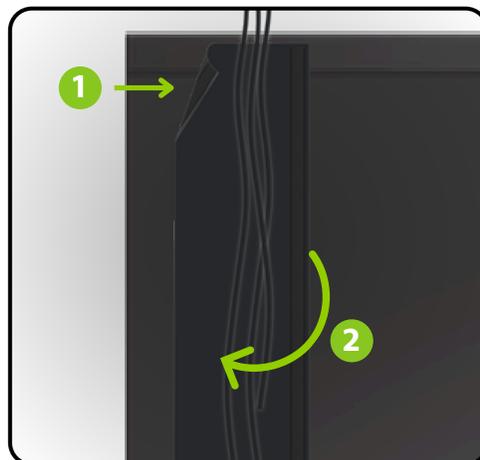

GOLFIN LAUNCHER INSTALLATION AND IDRA II CALIBRATION

Follow these steps to complete your installation:

STEP 1

Ensure your simulator computer (PC) is connected to the Internet.

STEP 2

Confirm that you have purchased the necessary software. IDRA II is compatible with GSPRO and E6 Connect.

STEP 3

Copy and paste the link below into the web browser of your simulator computer (PC) to download GolfIn Launcher:

<https://www.golfinsim.com/getlauncher>


STEP 4

Use the link below to book a calibration with our team.

<https://outlook.office.com/book/CustomerServiceBookings@golfinsim.com>

PROJECTOR PLACEMENT WHEN NOT USING THE PROJECTOR BEAM

- Minimum projector distance:
150" (screen to lens)
- Maximum projector distance:
163" (screen to lens)
- Projector Height:
88" (floor to the middle of the lens)

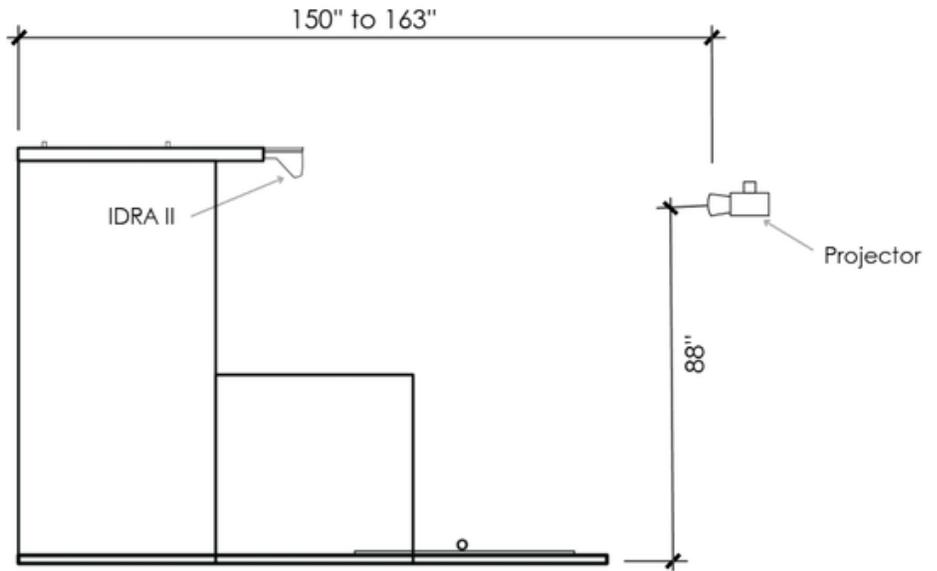

FULL-SCREEN PROJECTION ONLY AVAILABLE WITH THE AK700ST

BENQ AK700ST PROJECTOR AJUSTEMENTS **WITH MONITOR**

TABLE OF CONTENTS


- | | |
|-----------------------------------|--------------------------|
| 1. Select the correct HDMI Source | 4. Projector Settings |
| 2. NVIDIA Control Panel (PC) | 5. Projector Ajustements |
| 3. Windows Display Settings (PC) | |

1. SELECT THE CORRECT HDMI SOURCE

1. Turn on the projector and press the 'Source' button on the remote control.
2. Use the arrows to navigate to the appropriate HDMI input (HDMI 1 or HDMI 2) and press 'OK' to select.


2. WINDOWS DISPLAY SETTINGS (PC)

1. Open the NVIDIA Control Panel & make sure the projector is turned on.
2. Click on "Adjust desktop size and position"
3. Select your monitor
4. Select "Aspect ratio"
5. Keep the resolution at 1920 x 1080
6. Select your projector
7. Select "Aspect ratio"
8. Keep the resolution at 1920 x 1080
9. Click "Apply" at the bottom right of the screen. Then "Yes" to "Apply Changes"

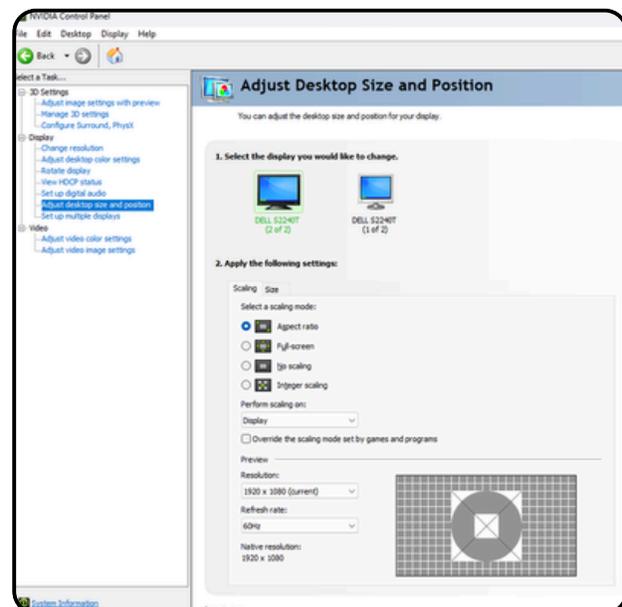


3. WINDOWS DISPLAY SETTINGS (PC)

1. Click Start > Settings
2. Go to System > Display
3. If both screens are detected, you will see two numbered rectangles (1 and 2)
4. Click on Extend these Display (menu below and to the right of the 2 screens)
5. Select "Duplicate these displays"
6. Click "Keep Change"
7. Make sure the display resolution is set to 1920 x 1080

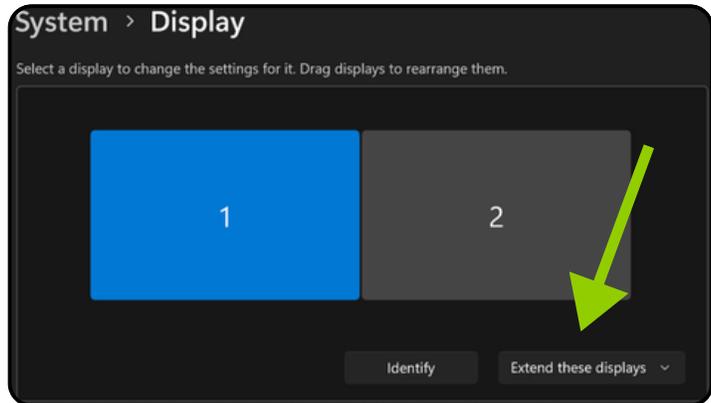


4. PROJECTOR SETTINGS

1. Turn on your Projector
2. Auto Screen Fit / Ok
3. Menu / Select Projector Position
4. Language: Select the desired language
5. Press Menu (On the remote) : Menu Type / Choose Advanced
6. Picture / Picture Mode: Select Golf

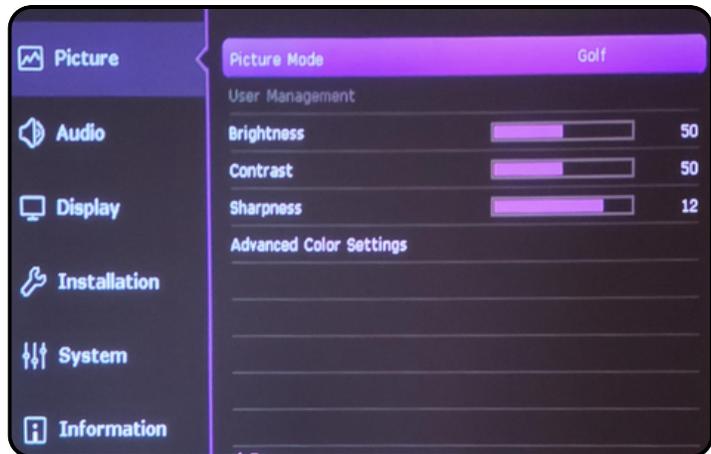

7. Display / Aspect Ratio / 16:9

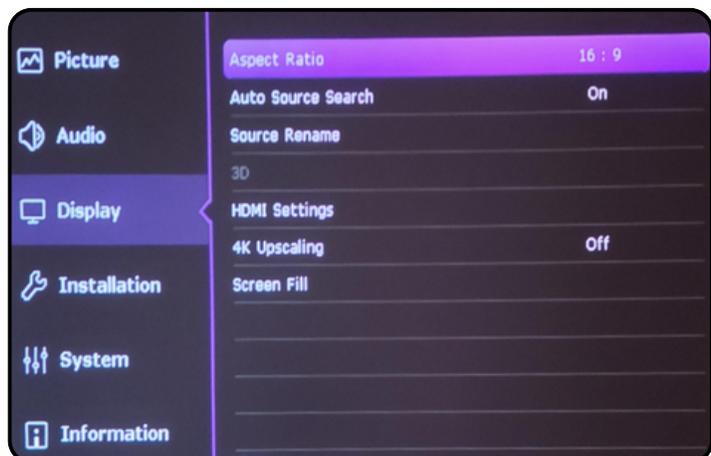


5. PROJECTOR AJUSTEMENTS

Each environment is unique, so this section may require a bit more time and patience. Depending on your setup (screen size, projector distance, ceiling height, etc.), the adjustments needed can vary significantly from one user to another.

Take the time to explore and combine the different adjustments below to achieve an image perfectly suited to your installation. Don't hesitate to repeat the process multiple times to fine-tune the result to your preferences.

- Installation / Image Resize / Digital Shrink & Shift

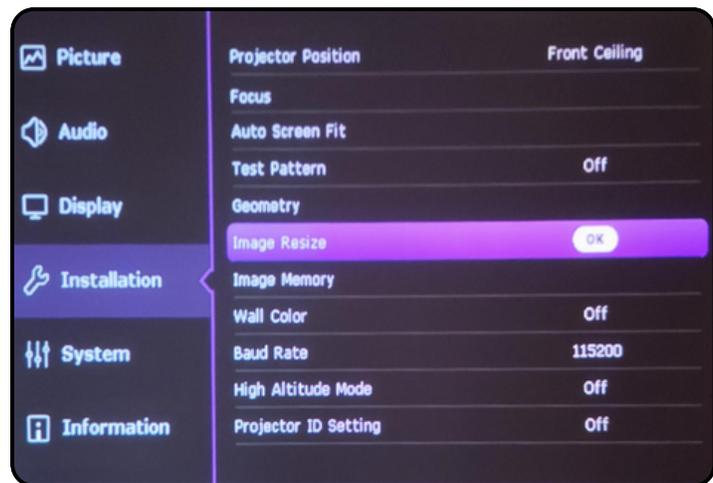

- Installation / Geometry / Corner Fit :
Fine-tune the image size and position for precise alignment




5. PROJECTOR AJUSTEMENTS (CONTINUED)

- Installation / Focus / Focus / Ok



- After the auto-focus, fine-tune the focus using the left and right arrows on the remote.

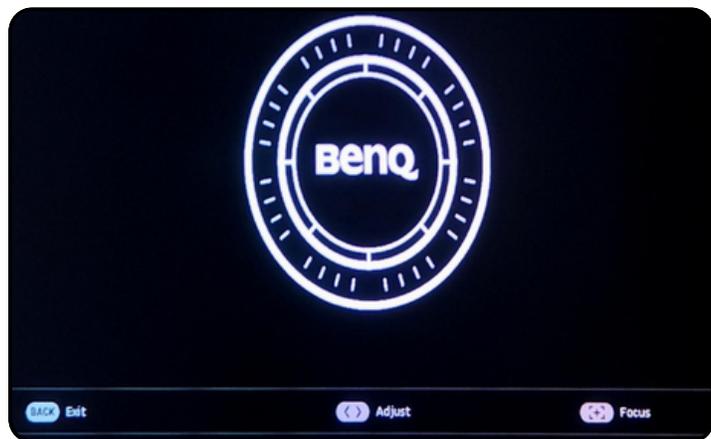

BENQ AK700ST PROJECTOR AJUSTEMENTS WITHOUT MONITOR

TABLE OF CONTENTS


- | | |
|-----------------------------------|--------------------------|
| 1. Select the correct HDMI Source | 4. Projector Settings |
| 2. NVIDIA Control Panel (PC) | 5. Projector Ajustements |
| 3. Windows Display Settings (PC) | |

1. SELECT THE CORRECT HDMI SOURCE

1. Turn on the projector and press the 'Source' button on the remote control.
2. Use the arrows to navigate to the appropriate HDMI input (HDMI 1 or HDMI 2) and press 'OK' to select.


2. WINDOWS DISPLAY SETTINGS (PC)

1. Open the NVIDIA Control Panel
2. Click on Change resolution:
 - Customise > Create custom resolution
3. Under Display mode (as reported by Windows), Change :
 - Horizontal pixels to 1547
 - Vertical Lines to 1080
4. Click on Test > Apply change > Yes
5. Click on Adjust desktop size and position:
6. Select "Full screen" (The projector must be turned on beforehand)
7. Change the Resolution to 1547 × 1080
8. Click "Apply" at the bottom right of the screen. Then "Yes" to "Apply Changes"

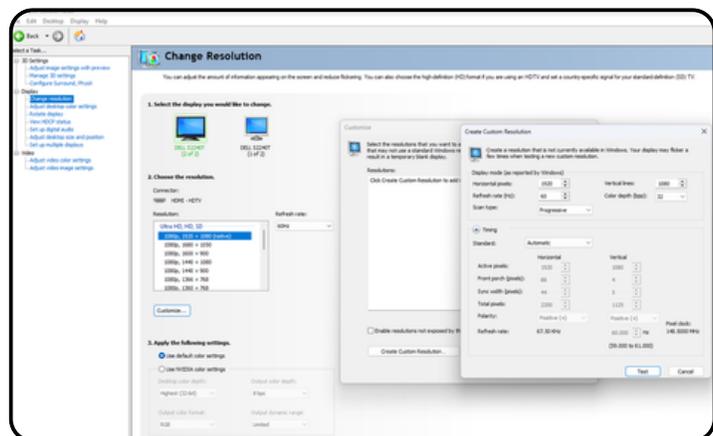


3. WINDOWS DISPLAY SETTINGS (PC)

1. Click Start > Settings
2. Go to System > Display
3. Make sure the display resolution is set to 1547 × 1080
4. If not, change it & Click "Yes" to keep these display setting

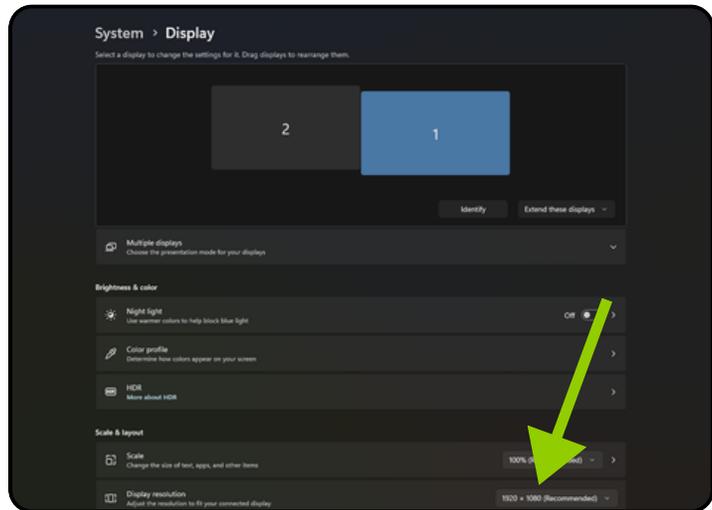


4. PROJECTOR SETTINGS

1. Turn on your Projector
2. Auto Screen Fit / Ok
3. Menu / Select Projector Position
4. Language: Select the desired language
5. Press Menu (On the remote) : Menu Type / Choose Advanced
6. Picture / Picture Mode: Select Golf

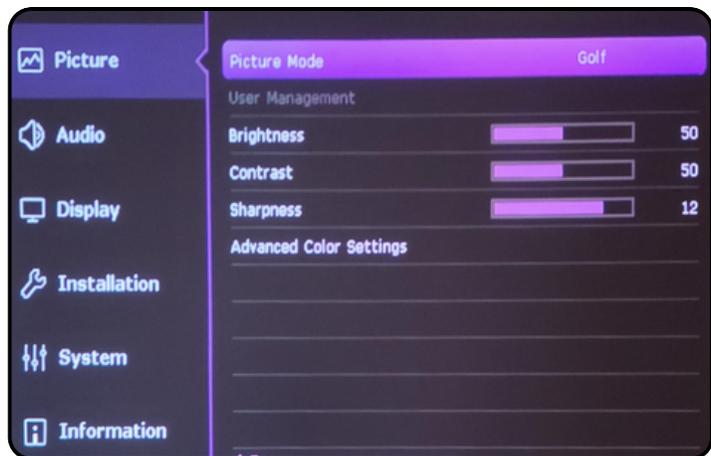

7. Display / Aspect Ratio / 16:9

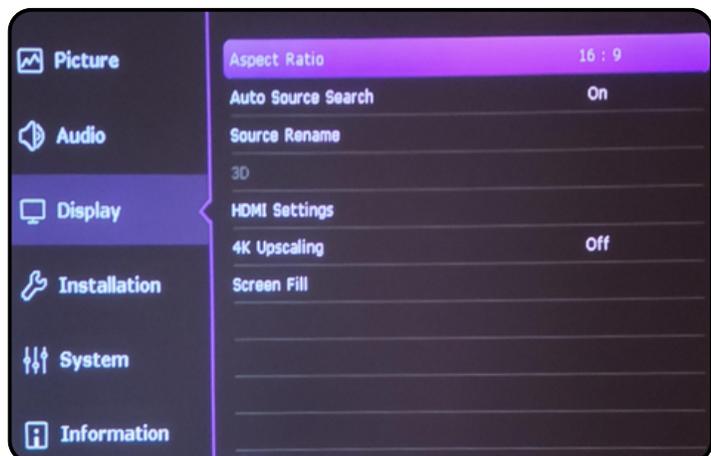


5. PROJECTOR AJUSTEMENTS


Each environment is unique, so this section may require a bit more time and patience. Depending on your setup (screen size, projector distance, ceiling height, etc.), the adjustments needed can vary significantly from one user to another.

Take the time to explore and combine the different adjustments below to achieve an image perfectly suited to your installation. Don't hesitate to repeat the process multiple times to fine-tune the result to your preferences.

- Installation / Image Resize / Digital Shrink & Shift

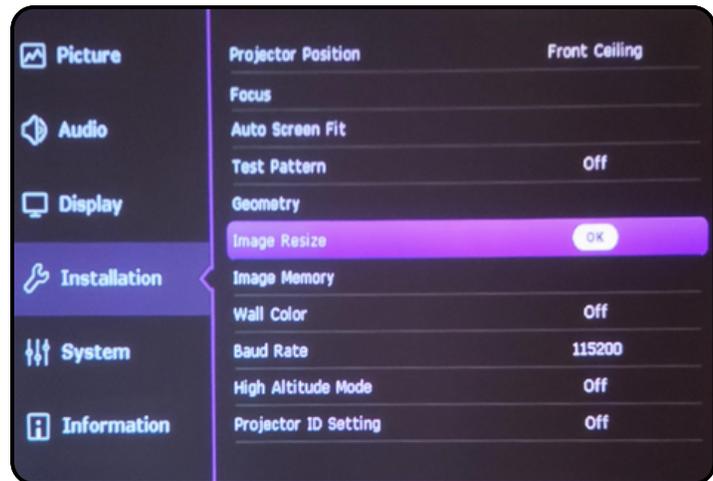

- Installation / Geometry / Corner Fit :
Fine-tune the image size and position for precise alignment

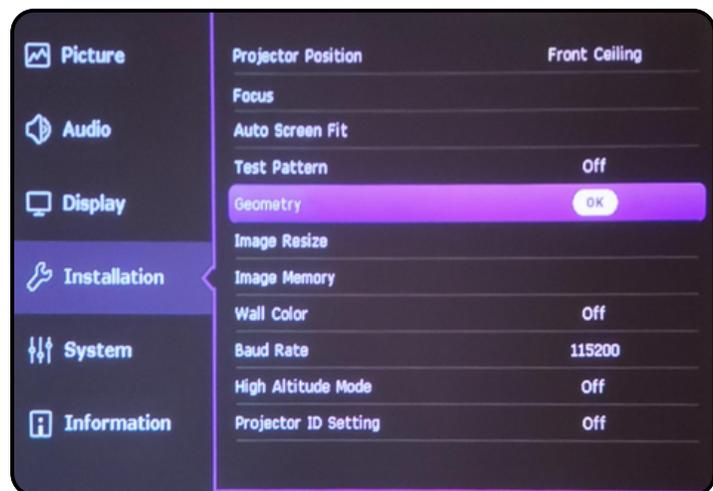

5. PROJECTOR AJUSTEMENTS (CONTINUED)

- Installation / Focus / Focus / Ok



- After the auto-focus, fine-tune the focus using the left and right arrows on the remote.

