



# INSTALLATION GUIDE

SIMBOOTH KIT 2 - 4K

SimBooth Safety Notice .....	3
IDRA II Safety Notice .....	4
PC Specifications .....	5
Parts List .....	6-7
Structure assembly .....	8-11
Floor assembly .....	12-13
IDRA II installation .....	14
Projector installation .....	14-15
Cables connection .....	16-17
GolfIn Launcher & IDRA II calibration .....	18
Appendix A (projector placement) .....	19
Appendix B (AH30ST adjustments with a monitor) .....	20-23
Appendix C (AH30ST adjustments without a monitor) ...	24-27



**WARNING**

**PLEASE READ THE FOLLOWING BEFORE USE.**

**FAILURE TO FOLLOW THE INSTRUCTIONS COULD RESULT IN SERIOUS INJURY, PROPERTY DAMAGE, AND/OR VOID THE DEVICE WARRANTY.**

- NEVER lift, move, or raise the structure if the impact screen is not installed and secured. The impact screen plays a critical structural stabilization role. Lifting or handling the structure without the screen installed may cause the frame to become unstable, tip, or collapse. This may result in serious injury, death, or severe property damage.
- SimBooth structures are designed exclusively for indoor golf simulation. Do not use the structure for storage, climbing, or for hanging objects.
- Install only on a flat and stable floor capable of supporting the total weight of the structure. Assembly must be performed by a minimum of four (4) people.
- Ensure all bolts, screws, and panels are correctly tightened before use. Loose or missing components may cause instability or structural collapse.
- Do not remove or modify the impact screen during normal operation. The screen is essential to absorb golf ball impacts and help prevent injuries.
- Keep children and pets away from the hitting area. Always remain aware of your surroundings and use caution while swinging.
- Do not modify the structure or add any additional weight to the frame or ceiling area.
- Indoor use only. Do not expose the structure to outdoor conditions, excessive humidity, water infiltration, or direct sunlight. Recommended operating conditions: Temperature: 10°C to 35°C (50°F to 95°F) Humidity: 30% to 65%
- Verify that the ceiling height and room dimensions meet the requirements of your specific SimBooth model before installation.
- Inspect the structure regularly to detect: Loose hardware, Worn impact screen, Damaged panels, etc. Replace worn or damaged components as needed.
- Always follow official SimBooth installation instructions. Improper assembly may compromise safety and void the warranty.

**WARNING**

**PLEASE READ THE FOLLOWING BEFORE USE.**

**FAILURE TO FOLLOW THE INSTRUCTIONS COULD RESULT IN SERIOUS INJURY, PROPERTY DAMAGE, AND/OR VOID THE DEVICE WARRANTY.**

- Before installing IDRA II, ensure the ceiling structure is capable of supporting a minimum of 20 lbs (9 kg). If the installation area is not sufficiently strong, it must be reinforced before installation. Failure to install on a secure structure may cause the launch monitor to fall, resulting in serious injury or equipment damage.
- The IDRA II mounting plate is specifically designed to secure an IDRA II launch monitor to the ceiling. **DO NOT** attach additional equipment or objects to the supplied bracket. Additional weight may cause damage or structural failure.
- Install IDRA II on a flat and stable surface only. Failure to do so may result in the launch monitor falling and causing injury.
- Do not attempt to disassemble, repair, or modify IDRA II. This may result in fire, electric shock, injury, or equipment damage. Contact support if issues occur.
- Ensure the hitting area is not directly exposed to sunlight, as this may negatively affect tracking performance.
- Always remain aware of your surroundings and play with caution.
- Do not install or operate IDRA II outdoors. This device is designed exclusively for indoor use.
- Do not install IDRA II where operating temperatures may be exceeded. Recommended operating temperature: 16°C to 30°C (61°F – 86°F) Excessive heat may damage the launch monitor.
- Install IDRA II away from excessive dust or humidity to prevent lens contamination and optical issues. Recommended humidity range: 30% to 65%
- Avoid touching the LED light to prevent burns. do not look directly into the LED light to avoid possible eye damage.

### PC SPECIFICATIONS WITH GSPRO

Requirement	Minimum	Recommended
Processor	Intel Core i7, 10th Gen, with at least 16 logical processors	<b>Intel Core i7, 10th Gen or newer, with at least 24 logical processors</b>
Storage	512 GB	<b>1 TB</b>
GPU	Nvidia GeForce RTX 20 series	<b>Nvidia GeForce RTX 40 series or newer</b>
RAM memory	16 GB	<b>32 GB</b>
USB Ports	2 USB 3.0 & 1 USB-C ports are required	
Internet	High-speed Internet is required	

### PC SPECIFICATIONS WITH E6 CONNECT

Requirement	Minimum	Recommended
Processor	Intel Core i7, 10th Gen or newer, with at least 16 logical processors	
Storage	512 GB	
GPU	Nvidia GeForce RTX 20 series	<b>Nvidia GeForce RTX 30 series or newer</b>
RAM memory	16 GB	
USB Ports	2 USB 3.0 & 1 USB-C ports are required	
Internet	High-speed Internet is required	



**WARNING**

**AMD PROCESSORS & GPUS ARE NOT SUPPORTED.**

**DO NOT USE USB CABLE EXTENSION BETWEEN YOUR PC AND YOUR IDRA II.**

### WALL PANELS


RIGHT WALLS



LEFT WALLS



### FLOOR PANELS

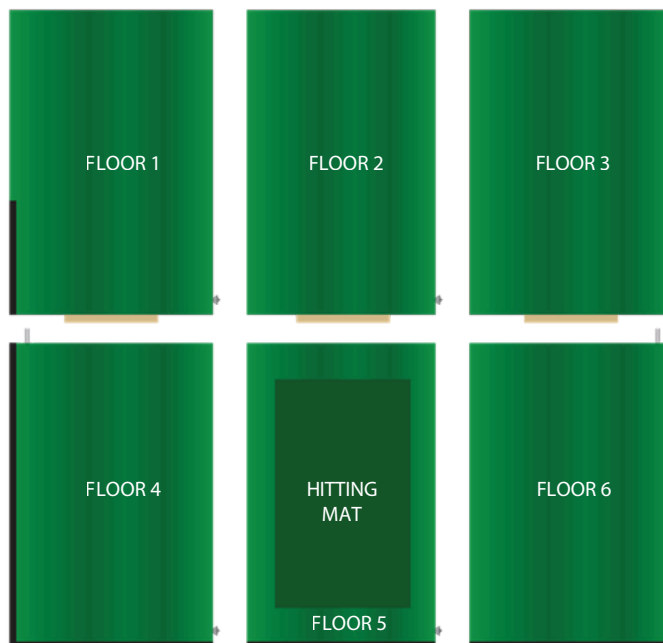

### CEILING PANELS



ACCESSOIRES

Bolt-01 (4x)



Wing nut (5x)



Washer (32x)



Nut (24x)



Bolt-02 (4x)



Bolt-03 (4x)



Tees (10x)




Scissor bar (2x)



Hitting mat




White projection screen

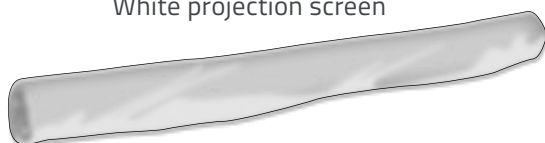

Black impact screen



Shim 1/2"

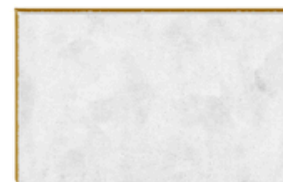


Projector beam



Shim 1/8"



Half walls (2x)

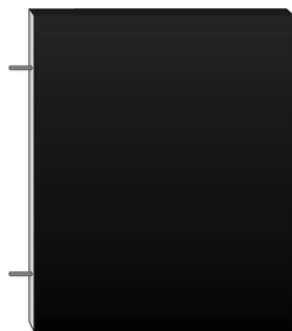

Remote & projector



Wire cover




LAUNCH MONITOR

IDRA II AI launch monitor



With power cable and two  
USB camera cables (1x)

Calibration board (1x)

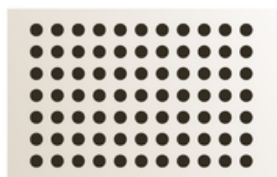

Nut + Washer  
(2x)



USB Hub (1x)



Wireless remotely  
operated switch (1x)  
(Only included in North America)



For illustration purposes only. Model may vary.

**BEFORE STARTING**


You will need 4 people, 2 ladders, a screwdriver and 1/2 wrench.



1

Attach the left top wall to the left ceiling with washers & nuts.

2x Washers  
2x Nuts

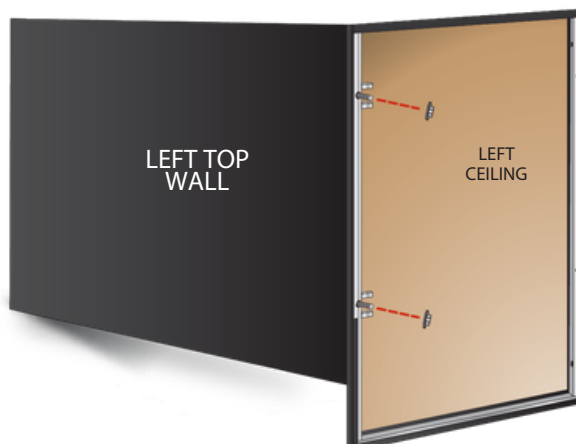

2

Using washers and nuts, attach the middle ceiling to the left ceiling, then attach the right ceiling to the middle ceiling.

4x Washers  
4x Nuts



3

Using washers and nuts, attach the right ceiling to the right top wall.



4

Remove the bottom wall covers, then attach the bottom wall panels to the top wall panels with washers & nuts





4x Washers  
4x Nuts



5

(1) Unfold the scissor bars and (2) secure them with the safety pins. (3) Attach the scissor bars to both ends of the structure using wing nuts and Bolt-02. (4) Attach the scissor bars to the center of the structure using washers and Bolts-01.


- 4x Washers
- 4x Wing Nuts
- 4x Bolts-01
- 4x Bolts-02

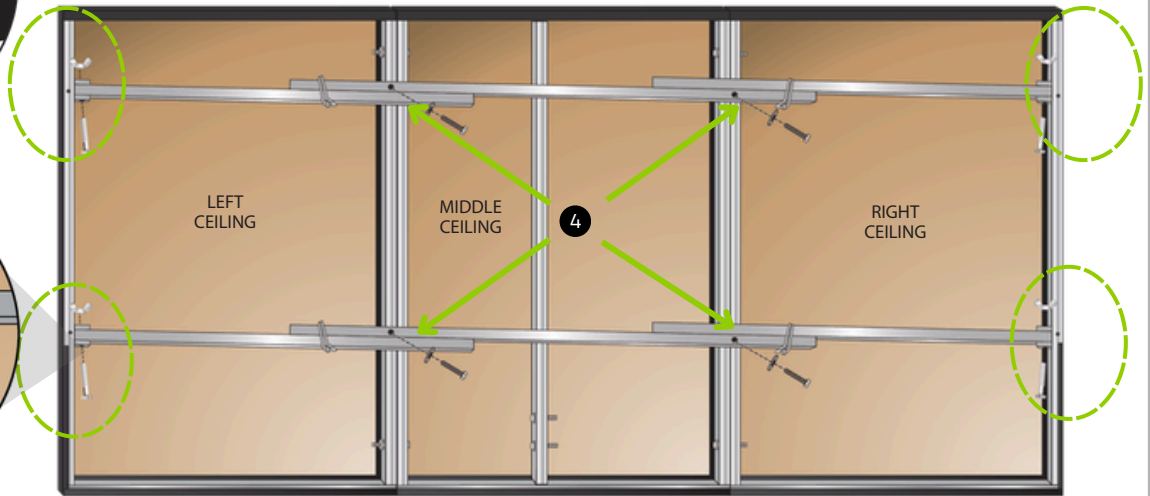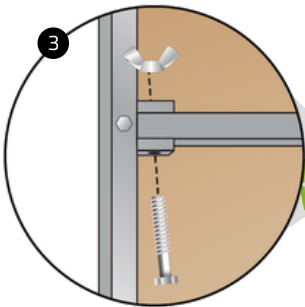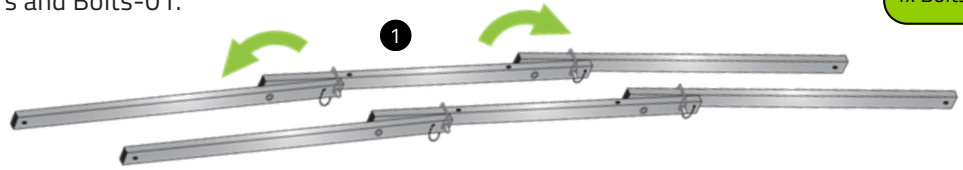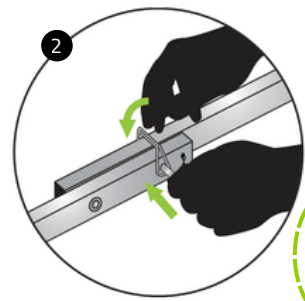

**IT IS IMPORTANT TO COMPLETE THIS STEP BEFORE LIFTING THE STRUCTURE.**


6

Attach the white projection screen to the structure using the velcros.

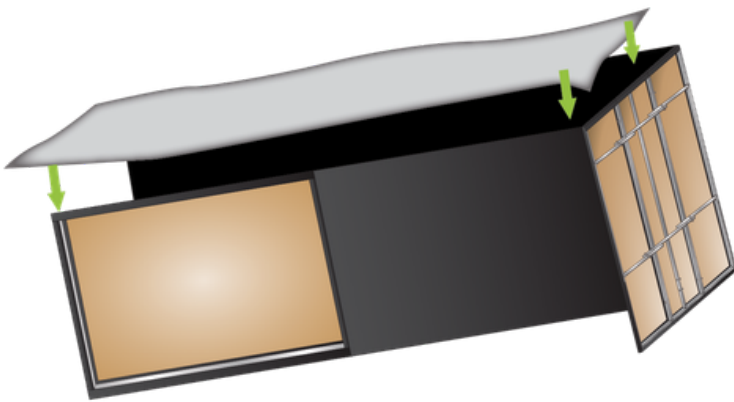

7

Attach the black impact screen over the white projection screen using the velcros. Make sure it is attached to the top velcros on the ceiling panels and that the bottom doesn't rest on the floor.

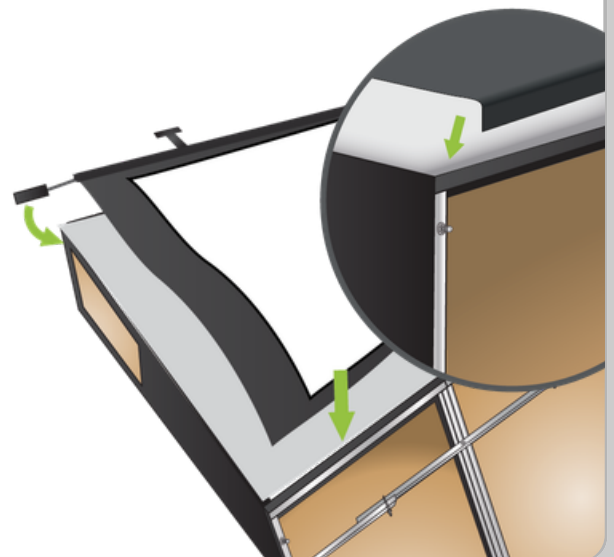

**8**

Lift the structure with four people.

**WARNING**

Never lift or raise the structure if the white projection screen is not installed. The structure may tip or fall and cause serious injury.

END OF STRUCTURE INSTALLATION SECTION

1

Assemble the floor sections in order (1 to 7). For A and B, you will need bolts-03, washers, and nuts. For C, you will need washers and nuts. You can use the shim to adjust the height of the hitting mat.

- 6x Washers
- 6x Nuts
- 4x Bolts-03



2

**Step 1**


Lift green carpet.

**Step 2**

Stretch the white screen behind and under the aluminum bar and reach for it through the space.

**Step 3**

Fix the screen on the first half of the velcro on the aluminum bar.

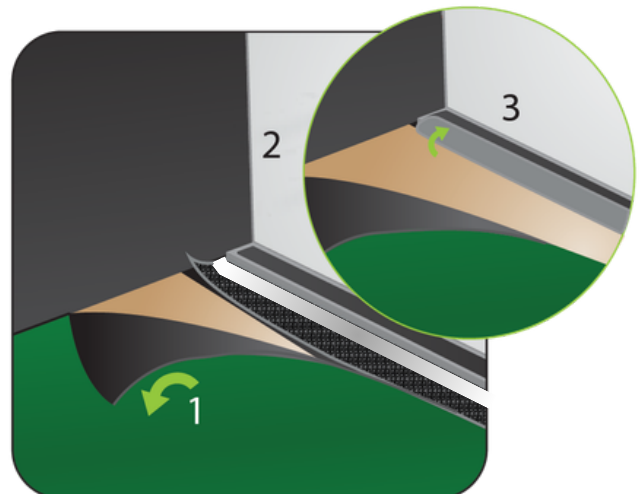

3

**Step 1**


Lift green carpet.

**Step 2**

Stretch the black impact screen behind and under the aluminum bar and reach for it through the space.

**Step 3**

Attach the T on the remaining half.

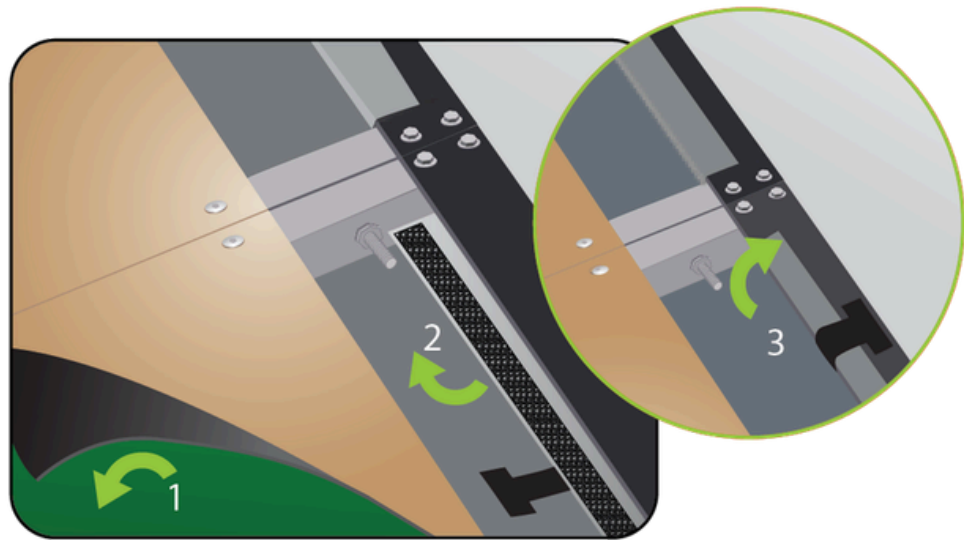

END OF STRUCTURE FLOOR INSTALLATION SECTION

**HALF WALLS INSTALLATION**

4x Washers  
4x Nuts

Simply cut through the black carpet to access the pre-drill holes and insert the half-walls. Fix the half-walls to the structure with washers and nuts. Then, fix the removable panel on the bottom walls with the velcro.




1

### IDRA II INSTALLATION

Climb on a ladder and fix the IDRA II camera through the holes that are located at the center the structure. Then, secure it tightly with two nuts on the other side.

2x Washers  
2x Nuts

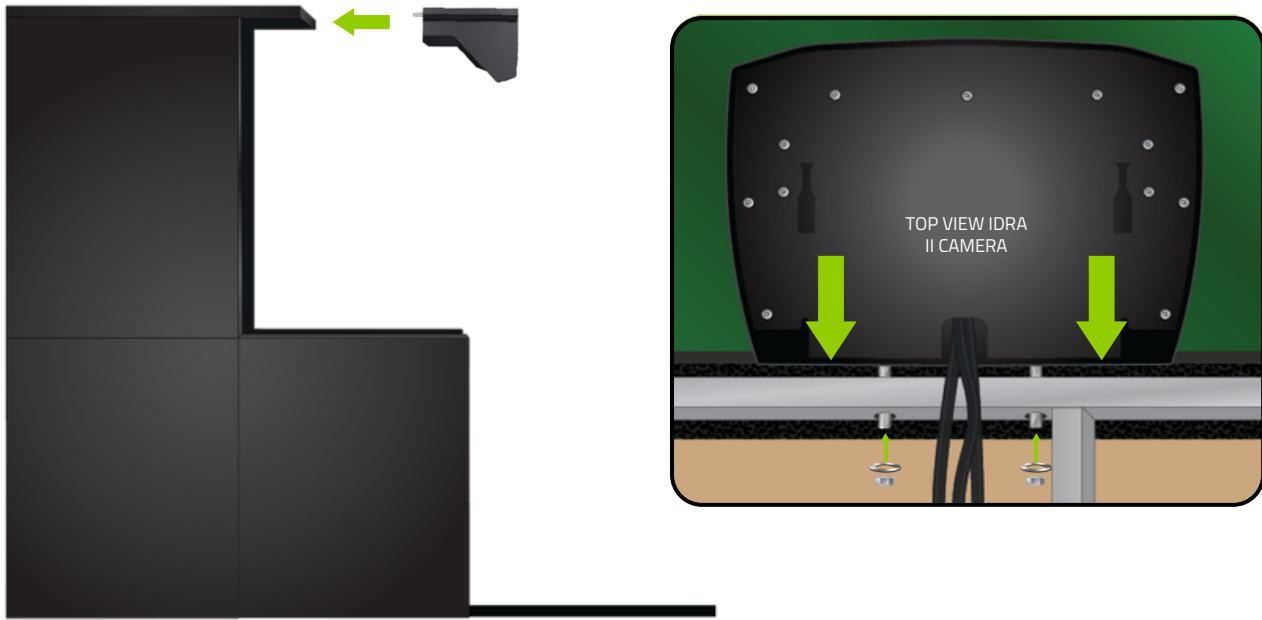


2

### PROJECTOR BEAM INSTALLATION

Fix the projector beam to the ceiling structure with washers and nuts.

2x Washers  
2x Nuts

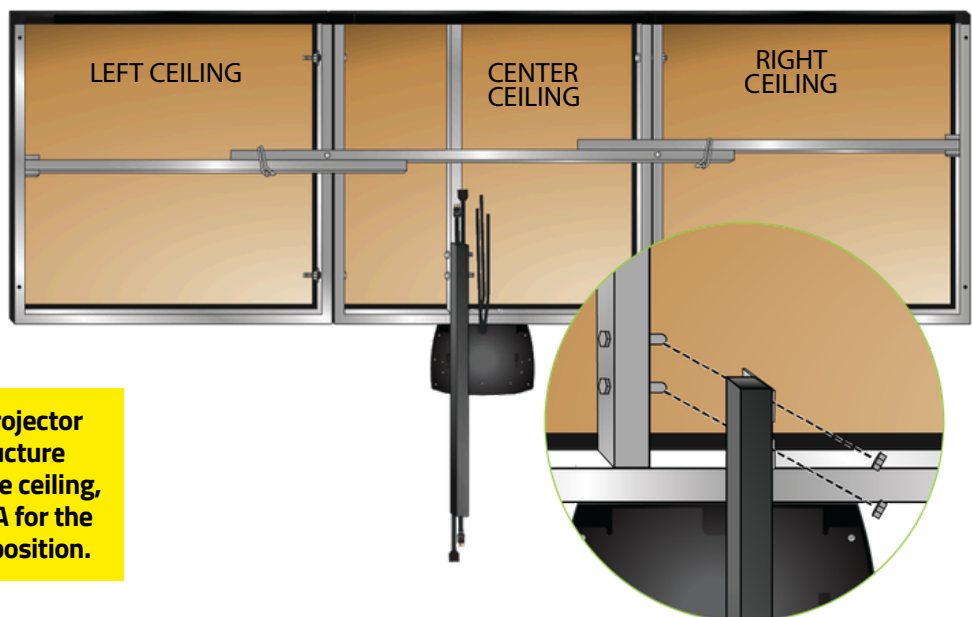


**If you are not using the projector beam attached to the structure and plan to install it on the ceiling, please refer to Appendix A for the recommended projector position.**

3

### PROJECTOR ENCLOSURE INSTALLATION (OPTIONAL)

**(A)** To install the projector enclosure, first remove the rear adjuster feet of the projector completely, and slightly loosen the front adjustable foot without removing it. **(B)** Next, insert the projector into the enclosure, making sure the lens is properly aligned with the designated opening. **(C)** Finally, reinstall the removed adjustable feet through the holes of the enclosure to secure the projector in place, and re-tighten the front adjustable foot.

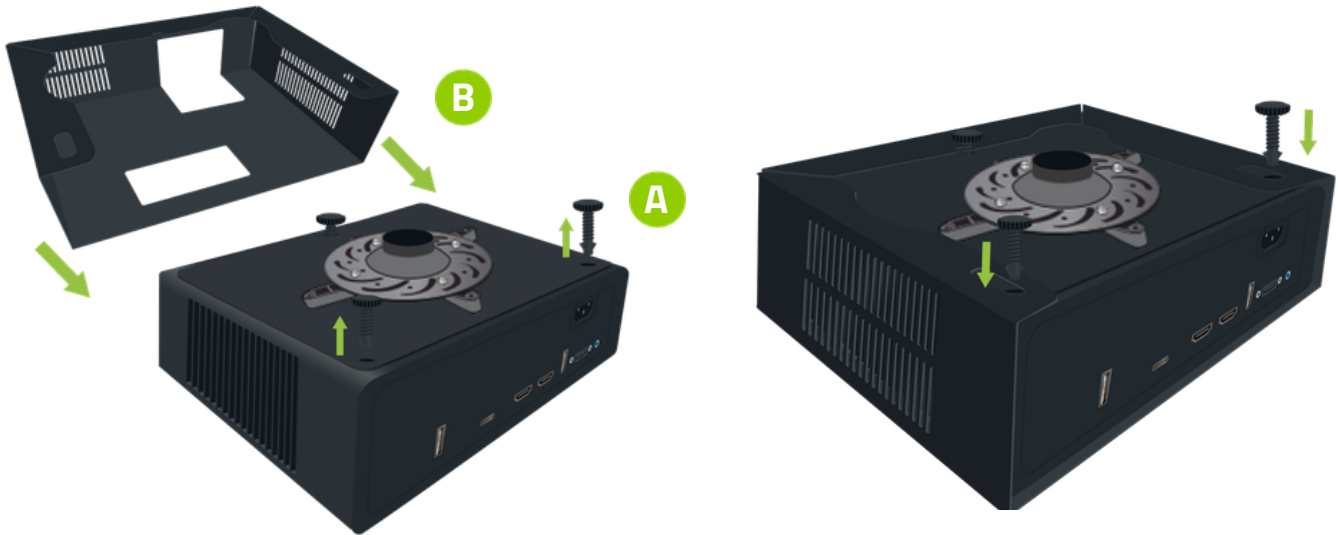

4

### PROJECTOR INSTALLATION

Attach the projector on the projector mount. Refer to the instruction sheet inside the projector box.



5

### IDRA CABLE CONNECTIONS

Connect the power cable (country-specific) to the wireless remote switch. Then, plug the wireless remote switch into your electrical outlet. Connect one of the two USB camera cables to the USB 3.0 SS port on your PC and the other to the hub. Plug the hub into the USB-C port on your PC. Make sure the USB cables are not under tension.



6



### PROJECTOR CABLE CONNECTIONS

Plug the HDMI cable to the HDMI port on your projector and on your PC. Connect the power cable to the ground terminal and your electrical outlet. **Refer to Appendix B, C, D or E for your projector adjustments.**



## WIRE COVER

Stick one side of the wire cover to the structure using the Velcro. Gather your wires inside the wire cover and, forming a loop over the wires, stick the second side of the wire cover just in front of your first Velcro.

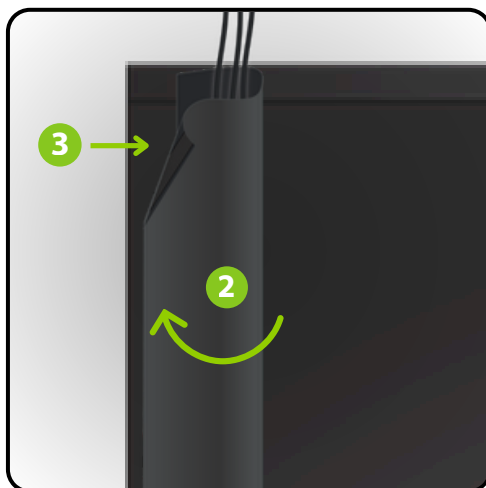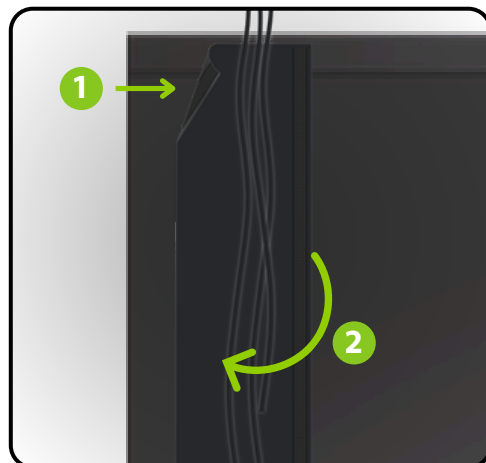

## GOLFIN LAUNCHER INSTALLATION AND IDRA II CALIBRATION

**Follow these steps to complete your installation:**

### STEP 1

Ensure your simulator computer (PC) is connected to the Internet.

### STEP 2

From the computer (PC) you use for your simulator, consult our websites resources page to download the Golfin Launcher: <https://www.golfinsim.com/resources/>

### STEP 3

Once the Golfin Launcher is downloaded onto your computer (PC) click on finish,

### STEP 4

A window will open automatically click on Continue. Follow the on-screen instructions to complete the calibration.

### STEP 5


Once calibration completed, the Golfin Launcher main menu will open. Select GSPro & enter your product key (You can find your key in the Welcome & Important Information - SimBooth Kit email we sent you).

### STEP 6

Enjoy your IDRA II !

**PROJECTOR PLACEMENT WHEN NOT USING THE PROJECTOR BEAM**

- Minimum projector distance:  
150" (screen to lens)
- Maximum projector distance:  
163" (screen to lens)
- Projector Height:  
88" (floor to the middle of the lens)

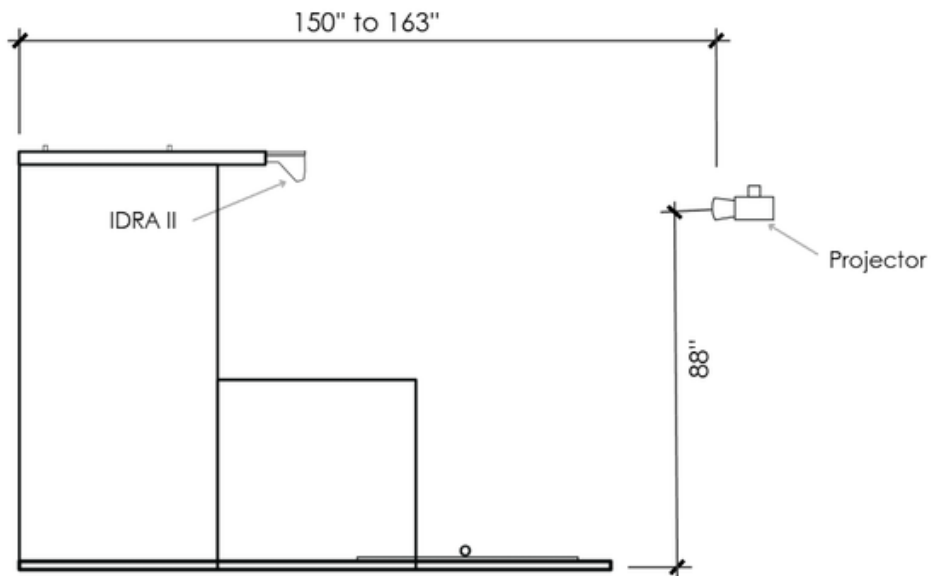

**FULL-SCREEN PROJECTION ONLY AVAILABLE WITH THE AK700ST**

# BENQ AK700ST PROJECTOR AJUSTEMENTS

Please note that **it is not possible** to achieve a full-screen projection when the projector is mounted on the projector beam installed on the simulator structure. In this setup, a strip of approximately 10 inches will not be projected at the top of the screen.


Regarding projector adjustment, some steps may vary if you are using an additional monitor along with the projector, as well as depending on your monitor's resolution.

## 1. SELECT THE CORRECT HDMI SOURCE

1. Turn on the BenQ AK700ST, then press Source (sometimes labeled **Input**) on the remote
2. Use the arrow buttons to highlight HDMI 1 or HDMI 2, then press OK to confirm
3. **If you see "No Signal"**: confirm the HDMI cable is connected, the computer is awake, and try the other HDMI input


## 2. WINDOWS DISPLAY SETTINGS (PC)

1. Select Start > Settings
2. Go to System > Display
3. If both screens are detected, you will see two numbered rectangles 1 and 2. *(This option is only for users with both a monitor and a projector. Otherwise, proceed to step 6)*
4. Under Multiple displays, select Duplicate these displays
5. Select Keep changes when prompted
6. Confirm the display resolution is set to 3840 × 2160

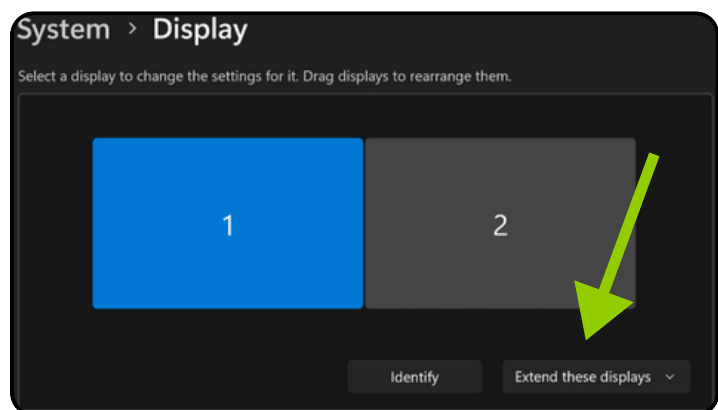


### 3. NVIDIA CONTROL PANEL (PC)

1. Open the NVIDIA Control Panel (make sure the projector is turned on)
2. Select Display > Adjust desktop size and position
3. Select your monitor, then set Scaling to Full-screen. *(If you are using only a projector, proceed to step 6)*
4. Keep (or change) the monitor resolution to 1920 x 1080 or 3840 x 1080 , as needed
5. Select your projector, then set Scaling to Full-screen
6. Set the projector resolution to 3840 x 2160
7. Select Apply (bottom-right), then select Yes to confirm Apply changes

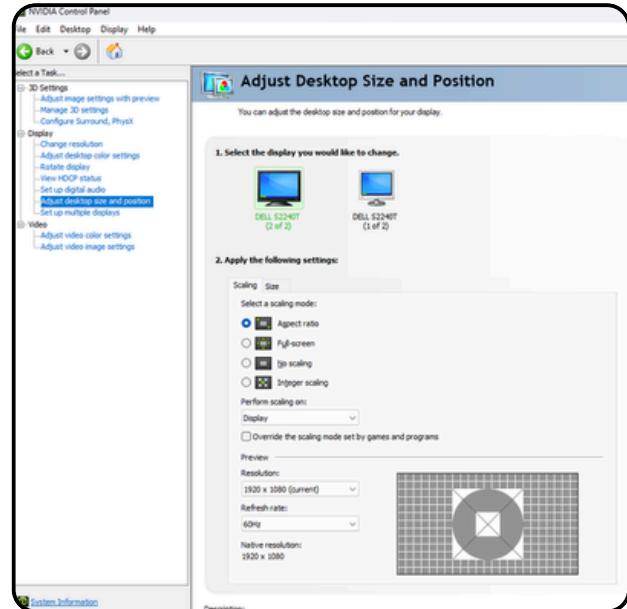

### 4. PROJECTOR SETTINGS

1. Press Menu / Select Projector Position
2. Language / Select the desired language
3. Click Ok for the next two steps
4. Press Menu again / Menu Type / Advanced
5. Picture / Picture Mode / Golf
6. Display / Aspect Ratio / 16:10
7. Display / Screen Fill / 16:9

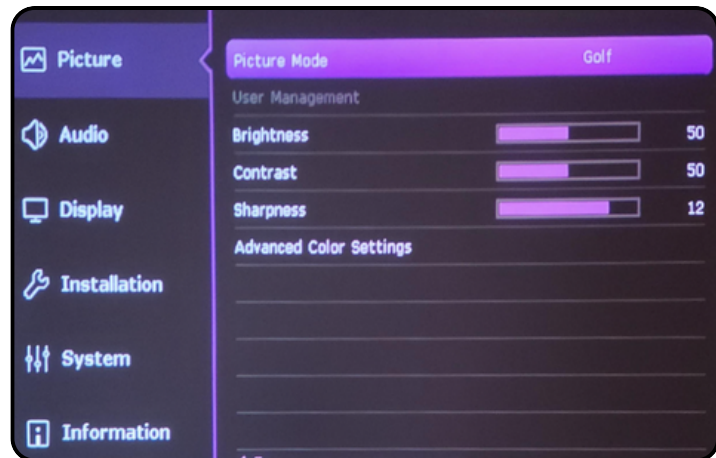

## 5. PROJECTOR AJUSTEMENTS

Each environment is unique, so this section may require a bit more time and patience. Depending on your setup (screen size, projector distance, ceiling height, etc.), the adjustments needed can vary significantly from one user to another.


Take the time to explore and combine the different adjustments below to achieve an image perfectly suited to your installation. Don't hesitate to repeat the process multiple times to fine-tune the result to your preferences.

**Start with** physical alignment (recommended): make sure the projector is stable and centered, and that Projector Position is correct

- Menu / Installation / Image Resize / Digital Shrink & Shift

Adjust the image so that it is slightly larger than the desired projection area. You can then fine-tune it in the next step.

If you use the Shift function to move the image up, down, left, or right, it may reset the next time you turn on the projector. We recommend physically moving the projector instead.

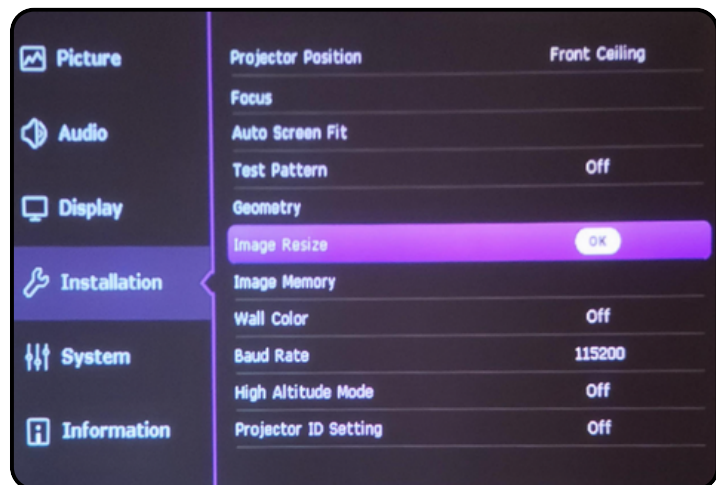

- Installation / Geometry / Corner Fit

Fine-tune each corner so the image aligns precisely with the screen corners (top-left, top-right, bottom-right, bottom-left).




## 5. PROJECTOR AJUSTEMENTS (CONTINUED)

- Installation / Focus / Focus / Ok

Adjust the focus control on the projector until text and fine details look sharp (check the center first, then the corners)



- After the auto-focus, fine-tune the focus using the left and right arrows on the remote.

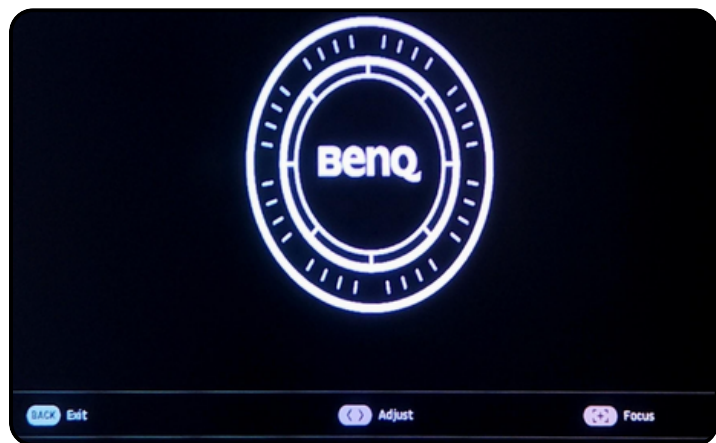

# BENQ AK700ST PROJECTOR AJUSTEMENTS WITHOUT MONITOR

## TABLE OF CONTENTS


- |                                   |                          |
|-----------------------------------|--------------------------|
| 1. Select the correct HDMI Source | 4. Projector Settings    |
| 2. NVIDIA Control Panel (PC)      | 5. Projector Ajustements |
| 3. Windows Display Settings (PC)  |                          |

## 1. SELECT THE CORRECT HDMI SOURCE

1. Turn on the projector and press the 'Source' button on the remote control.
2. Use the arrows to navigate to the appropriate HDMI input (HDMI 1 or HDMI 2) and press 'OK' to select.


## 2. WINDOWS DISPLAY SETTINGS (PC)

1. Open the NVIDIA Control Panel
2. Click on Change resolution:
  - Customise > Create custom resolution
3. Under Display mode (as reported by Windows), Change :
  - Horizontal pixels to 1547
  - Vertical Lines to 1080
4. Click on Test > Apply change > Yes
5. Click on Adjust desktop size and position:
6. Select "Full screen" (The projector must be turned on beforehand)
7. Change the Resolution to 1547 × 1080
8. Click "Apply" at the bottom right of the screen. Then "Yes" to "Apply Changes"

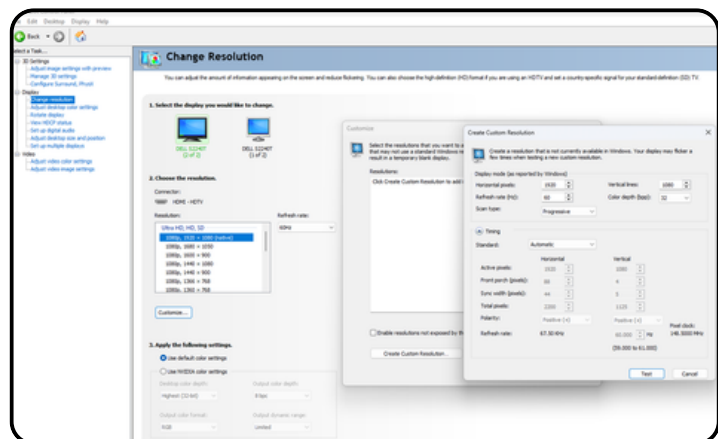


### 3. WINDOWS DISPLAY SETTINGS (PC)

1. Click Start > Settings
2. Go to System > Display
3. Make sure the display resolution is set to 1547 × 1080
4. If not, change it & Click "Yes" to keep these display setting

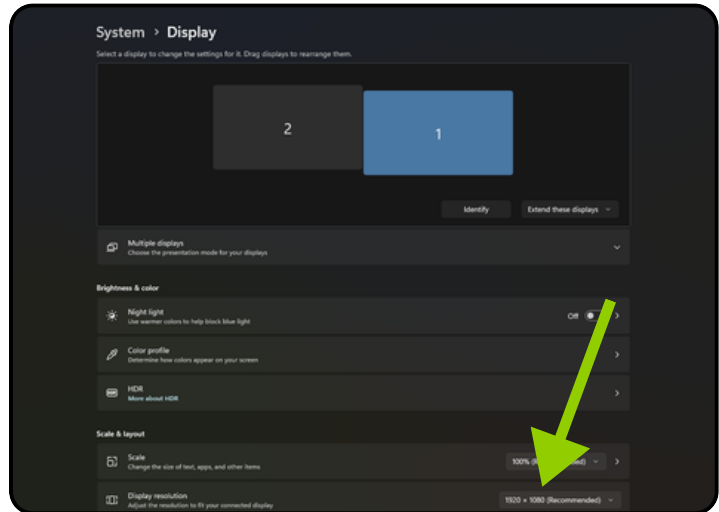


### 4. PROJECTOR SETTINGS

1. Turn on your Projector
2. Auto Screen Fit / Ok
3. Menu / Select Projector Position
4. Language: Select the desired language
5. Press Menu (On the remote) : Menu Type / Choose Advanced
6. Picture / Picture Mode: Select Golf

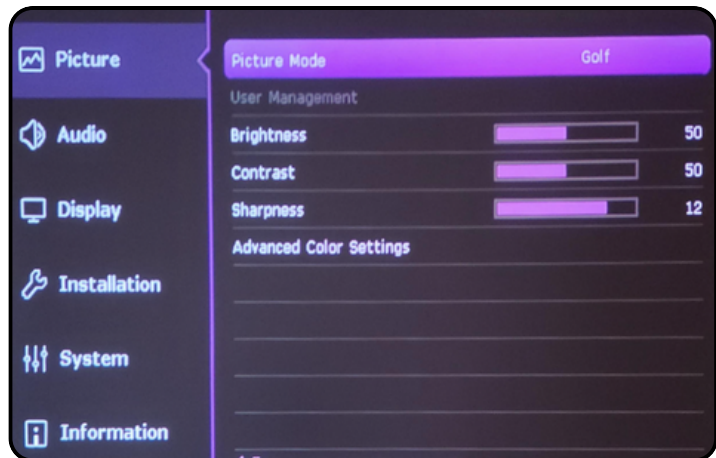

7. Display / Aspect Ratio / 16:9

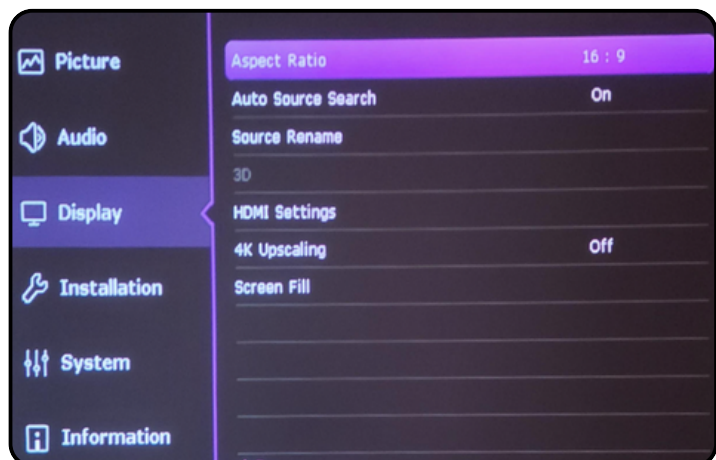


## 5. PROJECTOR AJUSTEMENTS


Each environment is unique, so this section may require a bit more time and patience. Depending on your setup (screen size, projector distance, ceiling height, etc.), the adjustments needed can vary significantly from one user to another.

Take the time to explore and combine the different adjustments below to achieve an image perfectly suited to your installation. Don't hesitate to repeat the process multiple times to fine-tune the result to your preferences.

- Installation / Image Resize / Digital Shrink & Shift

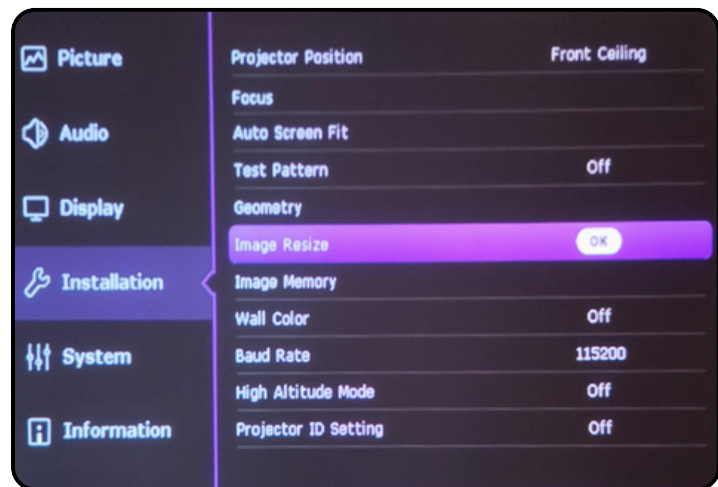

- Installation / Geometry / Corner Fit :  
Fine-tune the image size and position for precise alignment

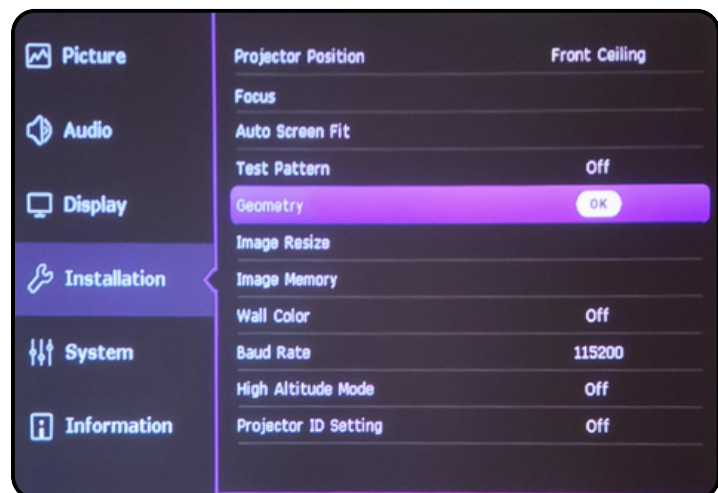

## 5. PROJECTOR AJUSTEMENTS (CONTINUED)

- Installation / Focus / Focus / Ok



- After the auto-focus, fine-tune the focus using the left and right arrows on the remote.

